




TSX QUICK REFERENCE GUIDE
Monday Night Setup and Printer Test

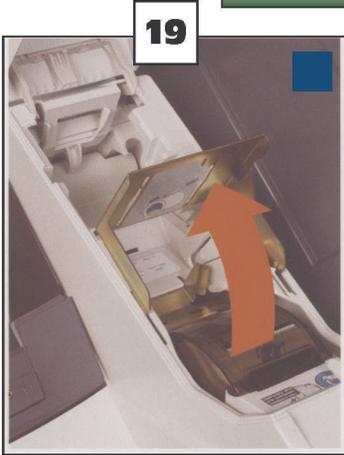


19 Raise the metal platen.

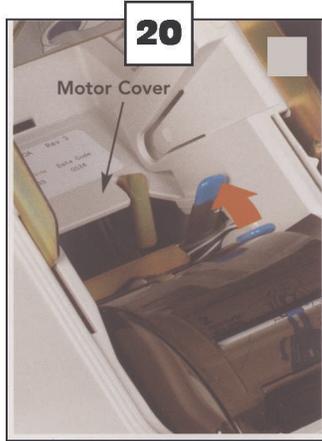

20 To secure the VVPAT, push the locking bracket forward. Ensure the motor cover moves up and down freely. Confirm that the housing is still securely seated under front lip with no gap.

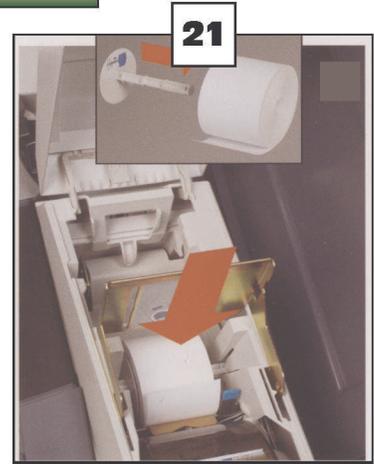


21 Tear edge of paper of new roll and load on the supply spindle with flange on the left and the edge of the paper on the bottom, then load spindle into housing.

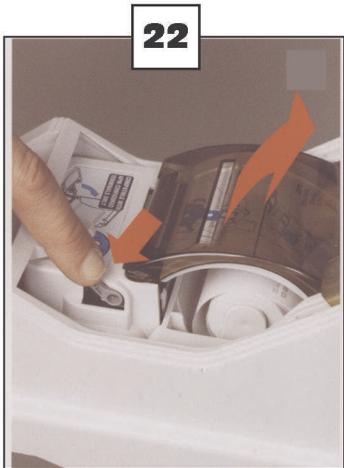


22 To feed paper: Push and release the grey lever and raise the smoky brown cover.




23 Thread paper through the slot in the top of the smoky cover. Pull out 24 inches of paper.

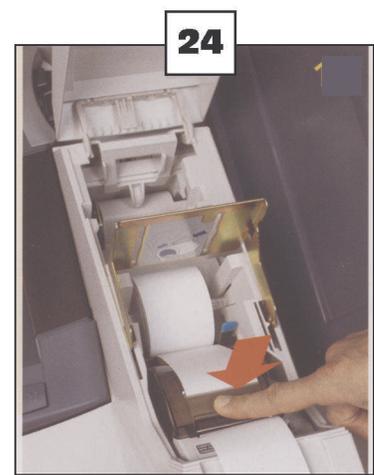


24 Push the smoky brown printer cover down until it clicks into place. Printer will then perform a single line feed.

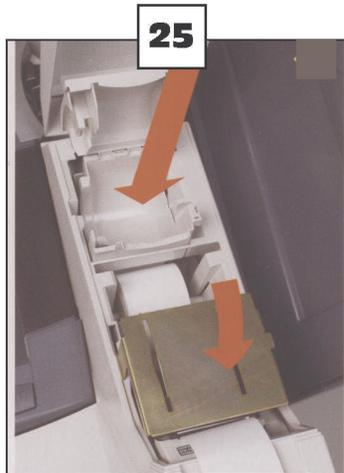

25 Lower the metal platen. Place empty take-up canister, with lid open, into VVPAT.

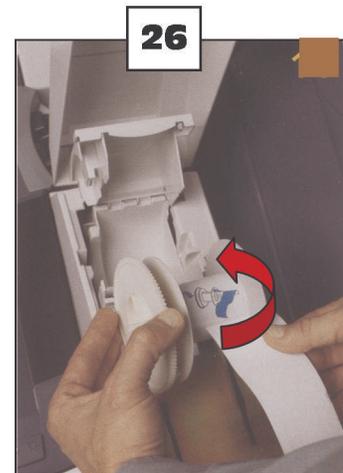

26 The take-up spool gears should be on the left. Insert paper on the right side into slot and wind excess paper over spool.

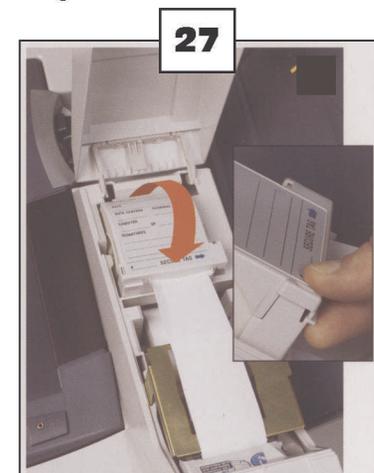

27 Place spool into canister. Close lid and snap shut.